

Asahi Optical Co., Ltd. C.P.O. 895, Tokyo 100-91, JAPAN
Asahi Optical Europe N.V. Weiveldlaan 3-5, 1930 Zaventem Zuid-7, BELGIUM
Pentax Handelspesellschaft mbH. 2000 Hamburg 54 (Lokstedt), Grandweg 64, WEST GERMAN
Pentax Corporation 35 Inverness Drive East, Englewood, Colorado 80112, U.S.A.
Pentax Canada Inc., 1760 West 3rd Avenue, Vancouver, B.C. V63 TK5, CANADA
Pentax U.K. Limited Pentax Hoose, South Hill Avenue, South Harrow, Middlesex HA2 OLT, U.Pentax France S.A. 72-76 Rue Paul, Vailliant Couturier, 92300 Levallois Perret, FRANCE

Printed in Japan

注意

- M X 用のフォーカシングスクリーンは L X に は使用可能です。S D-11は、M X・L X 共 用です。
- ●フォーカシングスクリーンには手をふれないでください。フォーカシングスクリーンはプラスチック製ですから、清掃はブロワーでごみを吹き払うだけにして下さい。こするとキズがつく恐れがあります。フォーカシングスクリーンをつまむ時は、付属のピンセットでフォーカシングスクリーンのつまみの部分をはさんでください。

IMPORTANT: The MX focusing screens are made of special materials and feature a newly developed Pentax coating to ensure brighter and sharper images. Never wipe screen surfaces with clothing or a cloth to avoid damage. Remove dust particles only with a blower or camel's hair brush.

 MX focusing screens can be used with the LX camera.



旭光学工業株式会社 ●174 東京都板橋区前野町2丁目35番9号 (560)5151(代) 旭光学商事株式会社

●お問合わせは次の各所へ

ペンタックスフォーラム 〒100 東京都新図区西新図2丁目1番1号 新図三井ビル(活動) 東 東サービスセンター 〒100 東京都中央区設定西67目10番地の 林 横サービスセンター 〒800 仙台市中央2丁回2番10号 仙都会館 横 海サービスセンター 〒800 仙台市中央2丁回2番10号 仙都会館 横 海サービスセンター 〒401 昭本7年21回12番40号 東明ビル 名古屋サービスセンター 〒401 宮古原工会町17日4番6号 東明ビル 広 島サービスセンター 〒401 宮古原工会の2丁目1番地 広 島サービスセンター 〒700 征島市中区中町8番12号 江島プリーンビル 福 岡サービスセンター 〒700 福岡市博安区中州中島町3番0号 新 海サービスセンター 〒701 福岡市博安区中州中島町3番0号 新 海サービスセンター 〒701 福岡市博安区中州中島町3番0号 新 海サービスセンター 〒701 新加市本園正番1191 (3番地 日本郷新新ビル

新 岡サービスセンター 〒420 新岡市區周辺と番2号 住及建設ビル 音 沢サービスセンター 〒920 金沢市尾委司2丁目8番23号 太瀬生命ビル 高 松サービスセンター 〒780 高品市製力町6番地12 初田ビル

高 松サービスセンター 〒/60 高松市政治期6番期12 期日●消費者相談室 〒104 東京都中央区銀座西8丁目10番地

□ 01(24) 042(1) □ 0222(61)5681(11) □ 045(681)8771(11) □ 052(962)5331(11) □ 06(271)7981(11) □ 0822(48)4321(11) □ 092(281)6868(11)

1092(281)6868(ft) 10252(24)8391(ft) 10542(55)6308(ft) 10762(22)0501(ft)

☎0878(21)7650(代) ☎ 03(572)6479(土曜年美)

PENTAX

MX 専用フォーカシングスクリーン の使い方 MX INTERCHANGEABLE FOCUSING SCREEN

Head

フォーカシングスクリーン[F.S と略す] **の交換方法**

ケースを開き→のように押すと、ピンセットが取り出せます。



カメラのレンズを外し、○印の裏側の押え板を押し上げると、F. Sが枠ごと下がります。



Changing the Focusing Screen

Removing the screen in the camera: First, remove the lens from the camera and take the special pincette supplied with the new focusing screen out of its case.



Handle


Insert the head of the pincette against the top plate of the mount as illustrated so that the two earlike tabs rest against the indentation in the plate. Then, gently lift the handle of the pincette in the direction of the arrow until the focusing screen frame releases and drops down.

CAUTION: Move the pincette very slowly and cautiously. If the screen doesn't release immediately, do not exert excessive pressure to avoid slipping and damaging either the focusing screen or mirror surface.

- 3. F. Sをピンセットで取り出し 4. 取り出した F. Sをケースの溝 ます。
 - に立て、交換するF.Sをピン セットで、F.S枠にのせます。
- 5. 図のようにピンセットで枠を 押し上げるとカチッと音がし て固定されます。





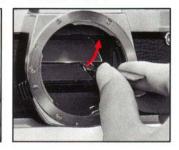

Squeeze the handle of the pincette and very carefully sangwich the tab of the focusing screen between the two sections of the head. Lift the screen out of the frame

and place it in the container to protect against dust and scratches. Installing the new Screen: Pick up the new focusing screen by the tab as described above and place it on

the frame with the tab on the rightnand side as shown. Push the frame back to its original position until it locks in place with a click.

ALWAYS USE THE PINCETTE WHEN CHANGING FOCUSING SCREENS AND HANDLE THE SCREENS BY THE TAB ONLY. TO AVOID DANGER OF SCRATCHING EITHER MIRROR OR SCREEN SURFACES, BE EXTREMELY CAREFUL THAT THE PINCETTE DOES NOT TOUCH SCREEN, MIRROR OR GLASS SURFACES. NEVER INSERT THE PINCETTE INTO THE MOUNT BEYOND THE FOCUSING SCREEN TAR

Lens/Screen Combinations

The chart on the opposite page serves as a guide for usable lens/screen combinations with the MX. Certain focusing screens are suitable for general applications with a wide variety of lenses, while others are for special applications with specific lenses or lens groups. A plain circle indicates that the screen is suitable for use with the indicated lens, a black circle indicates optimum lens/screen combinations. Lens/screen combinations where no marking is given are considered unsuitable, except when noted otherwise.

スクリーン種類 Lens/Screen Combinations

	Туре	SC-1	SA-1	SA-3	SB-1	SD-1	SD-11	SE	SG	SI
fish-eye	17mmF4	0	0		0					
reflex	15mm F3.5	0	0		0					
	18mm F3.5	0	0		0					
	20mm F4	0	0		0					
	24mm F2.8	0	0	0	0	2 5	2 5	2 = 0	2 4 5	(the
	28mm F2	0	0		0	(Setul	(€Ott	4 set	the Less	0000
	28mm F2.8	0	0	0	0	E =	Cseful for	Useful for close 1/4.5 or smaller (そのほか、実質的	Size o	the size of a subject in his
	30mm F2.8	0	0	0	0	カする	# 0	かいら	からき	かっる
	₩35mmF1.4	0	0		0	実 0	実質的	実習の	映。コ	映。
	35mm F2	O	0		0	実質的	Se ose	ller Se	0 S 5	Sur Sur
	35mm F2.8	0	0	0	0	L ups	実質的にはups v	17 5	other lenses subject. 像の大きさを	w Subject in n
	40mm F2.8	0	0.	0	0	id s	Id s	id %	100	204
	50mm F1.2	0	0		0	45 g		45 =	٠ د د د	E 3 8
	50mm F1.4	0	0		0	Centul for close ups with othe	以。		8 5	1 = 8
	50mm F1,7	0	0	0	0	Othe He	45以上C	N other	(そのほか) 映像の大きさをおよそ知りたい場合)	1ミリ単位で知りたい場合)
	50mmF2	0	0	0	0		ti -	ti -	知 Sage S	単位で C
	85mm F2	0	0	0	0	r lenses	る接写 enses	lenses a	to ek	学学
	100mmF2.8	0	0	0	0	E es	写 es		1 3 B	知り
	120mm F2.8	0	0	0	0			18 3	場 to	5 5
	135mm F2.5	0	0	0	0	接受	担り	授品	D)	E S
	135mm F3.5	0	0		0	超接写の	超海 (apertures of 場合)	apertures o	determine (D)	編(0)
	150mm F3.5	0	0		0	堪の	場。	場の	3	0)
	200mmF2.5	-0	- 0 -	- 0	0	-00 0	0 0	€ ·	ő	
	200mm F2	0	0		0	1/4	17.4			
	300mm F4	0	0		0		U			
	400mm F5.6					0	9		0	0
	500mmF4.5	0	0		0	Sm.	S T	0		
	1000mmF8					D D	aller		0	0
	1000mmF11					9,	97		0	0
	2000mm F13.5								0	0
zoom : 2	4∼ 35mmF3.5	0	0		0			0		
24~ 50mm F4		0	Ö		0					
28mm F3.5~ 50mm F4.5		Ŏ	0		0					
35mm F2.8~ 70mm F3.5		0	Ö		Ŏ					
40mm F2.8~ 80mm F4		0	Ö		O					
45~125mmF4		Ö	O		Ö					
	5~150mmF4	0	ŏ		Ö			0		
	0~200mmF4.5	Ö	O		0					
	5~600mm F6.7									
macro	50mm F4	0	0		0					
mauro	100mmF4	ő	Ö		O		-			
bellows	100mmF4	O	Ö		ő					
shift	28mm F3.5	Ö	0		0			0		
					0	0			_	_

○印は使用に適しています。●印は特に使用に適しています。 ※近日発売予定 * Availability to be announced.